

mitsubishi sj 15f – Selfjector Spare Parts

1) BOWL BODY	100641001
2) KNOCK PIN	436171001
3) LIGHT LIQUID CHAMBER	315784001
4) MAIN CYLINDER	200825001
5) MAIN CYLINDER	200927001
6) MAIN SEAL RING	436022001
7) O RING	408185002
8) O RING	A00250B
9) O RING	A10011F
10) O RING	A30080B
11) O RING	A41013F
12) O RING	A42017F
13) O RING	A43106B
14) O RING	A80330B
15) PILOT VALVE	450428001
16) PIN	452350001
17) PIN	452436001
18) TOP DISC	200822104
19) UPPER DISC	316599102
20) VALVE GUIDE	317750001
21) VALVE NUT	450489001
22) VALVE SHEET	436000001
23) GASKET	L04003215
24) IMPELLER (1)	316016001

25)	O RING	A10016A
26)	O RING	A10024A
27)	O RING	A10032A
28)	O RING	A10034A
29)	O RING	A20490A
30)	O RING	A80377A
31)	PRESSURE GAUGE	451346001
32)	SEALING WATER TUBE	316028103
33)	THERMOMETER	450566001
34)	BALL BEARING (1)	I16307J1
35)	BEARING HOUSING (3)	100655001
36)	BEARING HOUSING (4)	200856001
37)	BEARING RETAINER	451058001
38)	BOLT	F1008020C
39)	BOLT	F1010025C
40)	BOLT	F1010030C
41)	BRAKE BOSS	200907001
42)	BRAKE HANDLE	315956001
43)	BRAKE LINING	315957001
44)	BRAKE SHAFT	450541001
45)	BRAKE SPRING	04095
46)	COLLAR	450481001
47)	COLLAR	451277001
48)	FRICTION BLOCK	385078105
49)	FRICTION BOSS	200863001
50)	FRICTION PULLEY	200859001
51)	GEAR BOSS	200860001
52)	HORIZONTAL SHAFT	200858001

53)	KEY	C110040A2
54)	LINING BOSS	315960001
55)	LOCK NUT	J2007C0
56)	LOCK WASHER	J3007C0
57)	O RING	A20140A
58)	O RING	A20270A
59)	OIL SEAL	K1456510A
60)	RETAINING RING (C)	D3035D2
61)	SET SCREW (2)	E10512J1
62)	SOCKET SET SCREW	E400404G7
63)	SOCKET SET SCREW	E400620G6
64)	SOCKET SET SCREW	E401012G7
65)	SPRING PIN	B4005032D
66)	SPRING WASHER	H1010D1
67)	BEARING HOUSING (1)	200885001
68)	LOCK NUT	J2008C0
69)	LOCK WASHER	J3008C0
70)	O RING	A20155A
71)	SPRING CASE	450523001
72)	SPRING RETAINER (1)	450524001
73)	VERTICAL SHAFT	100671001
74)	BALL BEARING (1)	I16308J8
75)	BALL BEARING (3)	I27305J2
76)	BEARING (2)	I42305J1
77)	BEARING CAP (1)	450525001
78)	BEARING CAP (2)	450526001
79)	BEARING CASE (1)	314256001
80)	BEARING CASE (2)	314258001

81)	BEARING CASE (3)	315940001
82)	BEARING COVER (1)	200900001
83)	BEARING COVER (2)	436149001
84)	BEARING HOUSING (2)	200886001
85)	BEARING SLEEVE	314257001
86)	BOLT	F1004008B
87)	BOLT	F1008030C
88)	BOLT	F1012080C
89)	CHAMBER COVER	314260001
90)	COLLAR	436150001
91)	FLAT SPRING	436164001
92)	KEY	C106015A2
93)	LOWER SPRING	456501001
94)	MIST COVER	314254001
95)	O RING	A10100A
96)	O RING	A20035A
97)	O RING	A90080A
98)	OPERATING WATER CHAMBER	314262001
99)	OPERATING WATER DISC	314263001
100)	OPERATING WATER NOZZLE	314261001
101)	PACKING	436155001
102)	SOCKET CAP SCREW	E400608G7
103)	SOCKET CAP SCREW	F3008016B
104)	SOCKET CAP SCREW	F6005020B
105)	SPACER (1)	436166001
106)	SPACER (2)	436493001
107)	SPRING PIN	B4006016D
108)	SPRING SEAT	436153001

109)	SPRING WASHER	H1008D1
110)	SPRING WASHER	H1012D1
111)	STEEL BALL	J1016J0
112)	TONGUED WASHER	H5004B2
113)	UPPER SPRING	411981001
114)	WASHER	H4022A2
115)	COIL	OJDSP4017
116)	COIL BONNET	OJDSP5011
117)	DIAPHRAGM ASSEMBLY	OJDSPE003
118)	GASKET	452606-V17
119)	HANDLE	OJDSP5010
120)	O RING	452606-V13
121)	O RING	452606-V15
122)	PACKING	452606-V12
123)	PACKING	452606-V16
124)	PACK-LESS	OJDSPE008
125)	PILOT SPRING	OJDSPE005
126)	PLUNGER	OJDSP4019
127)	PLUNGER SPRING	OJDSP4021
128)	SPACER	452606-V14
129)	TERMINAL BOX	OJDSP4022
130)	VALVE BODY	OJDSPE004
131)	VALVE BONNET	OJDSP4020